



EL SET-78-1

Toyota Landcruiser VDJ78R V8 4.5L Troop Carrier 2007-current

CHECK YOUR PACK LIST

Once you have unpacked the system from the box make sure you have all parts that are listed on the packing list below.

Components	GASKET KIT	
VDU79-1	3" 2-bolt gasket	3
VD78-1	Nuts	6
VDU79-6	Bolts	6
VDU79-7	Pyro Bolt	1
	M6 Flanged Nut	8



TOOLS REQUIRED:


- Socket ratchet and various length extension bars
- Sockets and ring spanners 10mm and 14mm for removal of your standard exhaust.
- 14mm/ 9/16", 10mm, socket and ring spanner for your new exhaust installation.
- Spray lube (e.g. WD40, Innox, Rust Off)
- Portable light

IMPORTANT:


- Before installing your exhaust, park your vehicle on level ground ensuring it is in gear (or Park) and the handbrake is applied. **Never** use a jack to support the weight of the vehicle while working on it.
- Wear protective clothing including eye wear when installing the exhaust system.
- Wait until the vehicle's engine and exhaust system has completely cooled BEFORE you begin to remove the existing exhaust.

Removing Exhaust

1. Once the engine is cold, generously spray the dump pipe bolts with WD40 (or other spray lube) and leave to penetrate. Now spray all the factory exhaust mounting points on vehicle with spray lube.
2. Give the dump pipe studs a spray WD40 (or other spray lube) and leave to penetrate whilst removing your factory exhaust.
3. Starting with the tail pipe, undo all exhaust nuts and bolts working your way forward. Remove each part as it becomes separated from the vehicle. The tail pipe/muffler section can be removed in one piece twisting towards the front of the vehicle. May also be cut to remove a little but easier.
4. When removing the Dump pipe remove the 2x14mm bolts that go to the gear box. Keep the 2 x14mm bolts as one of these will be re-used to mount your new genie exhaust.

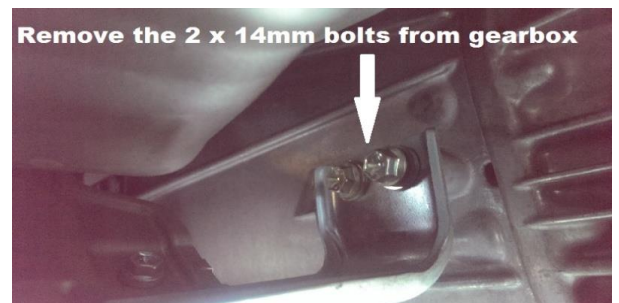

5. When removing the dump pipe be sure to not damage the standard turbo gasket as this will have to be re-used if in good condition. Keep the gasket and turbo nuts (3x14mm) safely aside for re-install. The outside nut is easiest to access from the wheels arch between the chassis rail and the inner guard with a 14mm ring spanner.

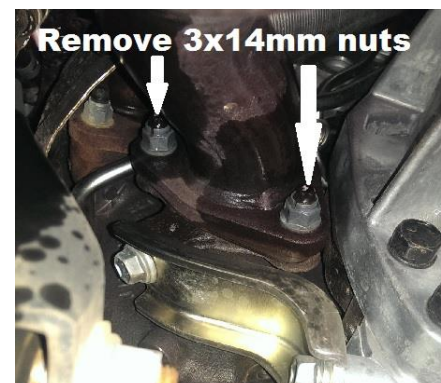


6. Ensure any damaged exhaust mounts are replaced at this time (or you may void your warranty) to prevent future problems (vibrations, rattling or breakage) once the new exhaust is fitted.

Installing Your New Exhaust

- A. If you ARE installing a pyrometer it is easiest to install it into the dump pipe BEFORE the dump is fitted to the vehicle.
- B. If you ARE NOT installing a pyrometer, then install the ¼ tapered thread plug into the threaded boss in the dump pipe. We recommend using anti-seize on the pyro plug thread.

CAUTION: Because the thread is tapered over-tightening may damage the thread.

1. Using the original turbo dump pipe gasket, nuts install the dump pipe and finger tighten the nuts and/or bolts. DO NOT TIGHTEN YET.
 2. When installing the Dump/flex pipe finger tighten the bracket to the rear factory gearbox mount using one of the 14mm bolts removed earlier. Now finger tighten the dump pipe bolts (3x14mm).
- 
3. Using the nuts, bolts and gaskets supplied continue installing the exhaust from the front working towards the rear of vehicle using the factory mounting points (some more spray lube maybe required). All nuts and bolts should be finger tight at this stage. DO NOT TIGHTEN YET.
 4. Because the nuts are not tightened you will have a small amount of rotation available in the exhaust. Use this to best line up the location of the factory mounting points with the exhaust mounts while also leaving the most amount of clearance around the exhaust system. If all mounting points are not used this product may not be covered by the warranty.
 5. Your new exhaust is now fitted finger tight to your vehicle. If you are happy with where the system is sitting, go ahead and tighten all the nuts and bolts starting at the dump pipe and working towards the rear of the vehicle.

Final checks once system is fitted

Now that your exhaust system is fitted to the vehicle do a final check over of the system:

- Make sure all the factory mounts are used and all heat shields have been replaced where applicable.
- Double check all nuts and bolts are tight.
- You may now start the vehicle and run at idle for a couple of minutes.
- Now the vehicle is ready for a test drive. Once returning from test drive and vehicle has cooled check all nuts bolts, some may need re- tightening, and gaskets can be inspected.
- Also re-check tightness of the bolts after 20-50km

Now get out there and enjoy your new exhaust



Thanks for choosing a Legendex product

If you're on Facebook or Instagram we would love to show of your vehicle on our page.

Simply tag us in a post with photos of your Legendex product using the tags below and we will feature your vehicle.

@legendex on Facebook and Instagram

And don't forget to Like, Share and Subscribe.

