



LEGENDEX ROGUE M.O.L.L.E

MR-SET76-RC & MR-SET79-2-RC

79 Series Dual Cab & 76 Series Roof Console

PRODUCT CODE: MR-SET76-RC & MR-SET79-2-RC




LEGENDEX.COM.AU (07) 3203 2333

CHECK YOUR PACK LIST

Once you have unpacked the system from the box make sure you have all parts that are listed on the packing list below.

COMPONENTS

1 x MR-SET79-R2	M.O.L.L.E - Roof console 79 Dual Cab 2007-201576 Wagon
1 x MR-79-R-2-KIT	79 Dual Cab Roof Console Euro Flo Set
6 x CON-MOLLESCREWM4x16- BUTTONHEAD	S304 -- M4x16- BUTTONHEAD SCREW
6 x CON-MOLLENUT-NFSMS6	NFSMS3046 - S304 Flange Serrated Hex Nut M6
1 x MR-TOY-H-1	MR Wiring Harness to suit MR-80-R-1
5 x CON-MOLLENUT-NFSMS4	NFSMS3044 - S304 Flange Serrated Hex Nut M4
5 x CON-MOLLESCREWM4x30- BUTTONHEAD	S304 -- M4x30- BUTTONHEAD SCREW

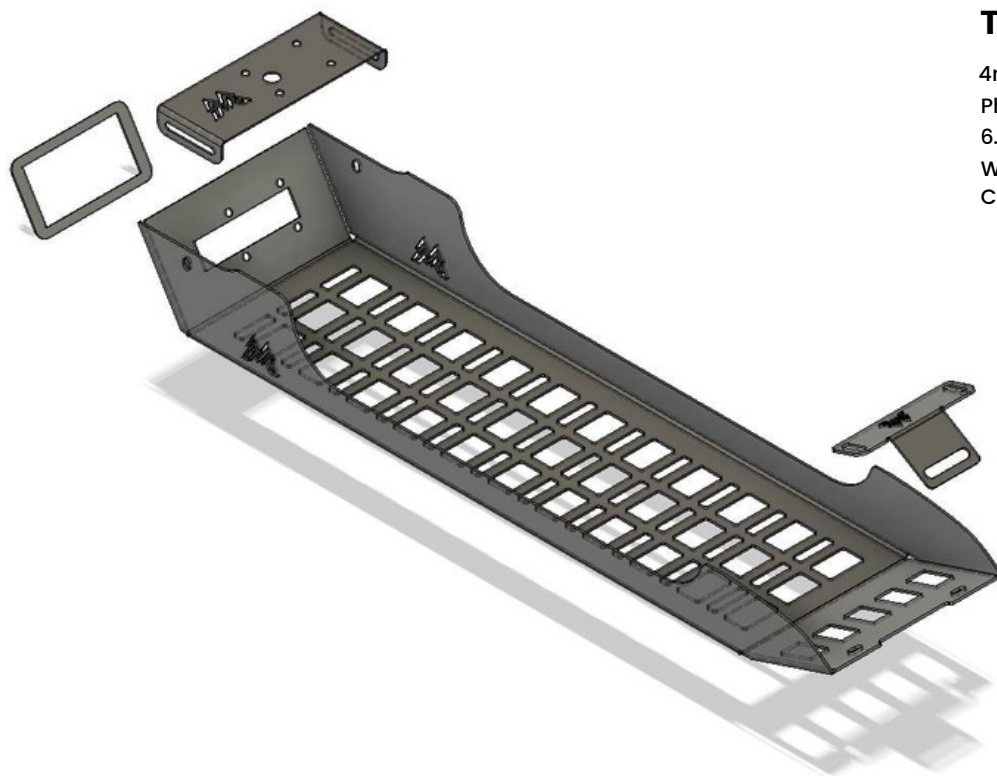

TOOLS REQUIRED

- 4mm Allen Key
- Phillips Head No2 Screw Driver
- 6.5mm Drill Bit
- Wire Cutter and Stripper
- Crimper

IMPORTANT

- Wear protective clothing including eye wear.
- Clean Hands work best.
- Disconnect the Battery to ensure you don't earth out. Or Use an Auto-electrician.

INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SET76-RC & MR-SET79-2-RC

STEP 1

Start with double-checking all the correct components and gathering the tools required.

STEP 2

Remove cover from front rear view mirror.



STEP 3

Loose fit the front bracket behind rear view mirror and refit leaving screws loose.



INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SET76-RC & MR-SET79-2-RC

STEP 4

Remove Interior courtesy light cover.



STEP 5

Remove the four screws securing the interior light and keep handy for re-use



STEP 6

Unplug interior light, take note of which colour goes to each pin for future reference. A photo may help here.



INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SET76-RC & MR-SET79-2-RC



STEP 7

Add the patch harness to the factory plug. We recommend adding electrical tape to secure plugs at this stage. Note which wire is going to the pink wire (colours can change between models) mark the corresponding end of the wire for future reference.




STEP 9

Fit one end of the patch loom eyelet wire to one of the screws, this will become your earth lead.



STEP 8

Feed wires through the rear mounting bracket and then secure in place using the factory screws.

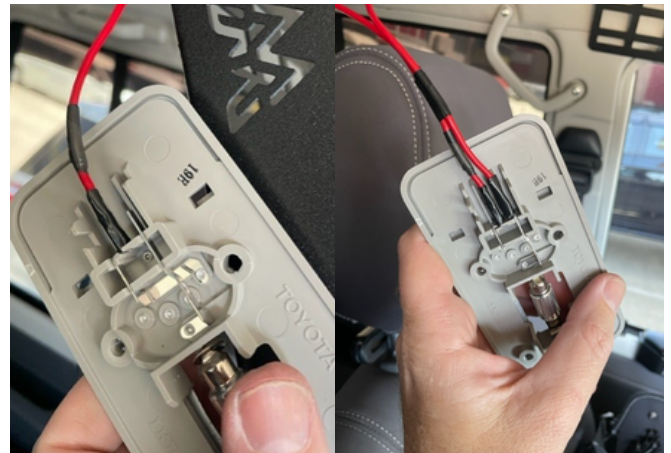

STEP 10

Matching the wire you marked earlier for the opposite end of the patch loom to your interior light.

It is important to match the wires correctly or you will create an electrical short.

INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SET76-RC & MR-SET79-2-RC



STEP 11

Feed the interior light through the body of the console AND the light spacer.




STEP 13

Secure in place using the 4mm bolt, not and washer supplied in your kit. Take note of the earth both (pictured below) for the next step



STEP 12

Position the spacer and interior light into position to be secured.

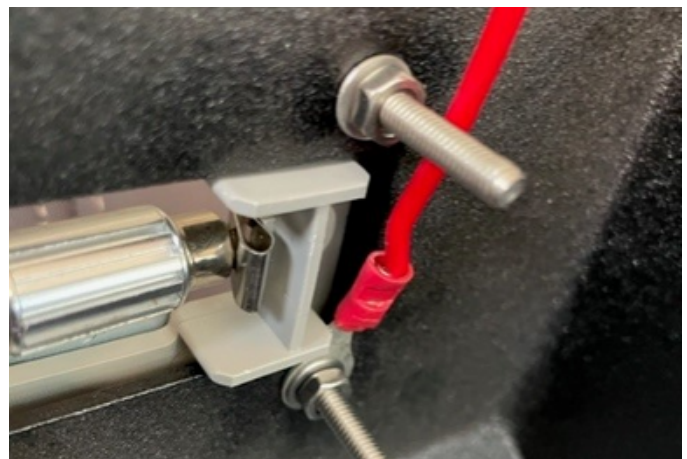


STEP 14

Once you have identified the earth bolt fit the cable with eyelet to complete your power circuit to the interior light.


INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SET76-RC & MR-SET79-2-RC

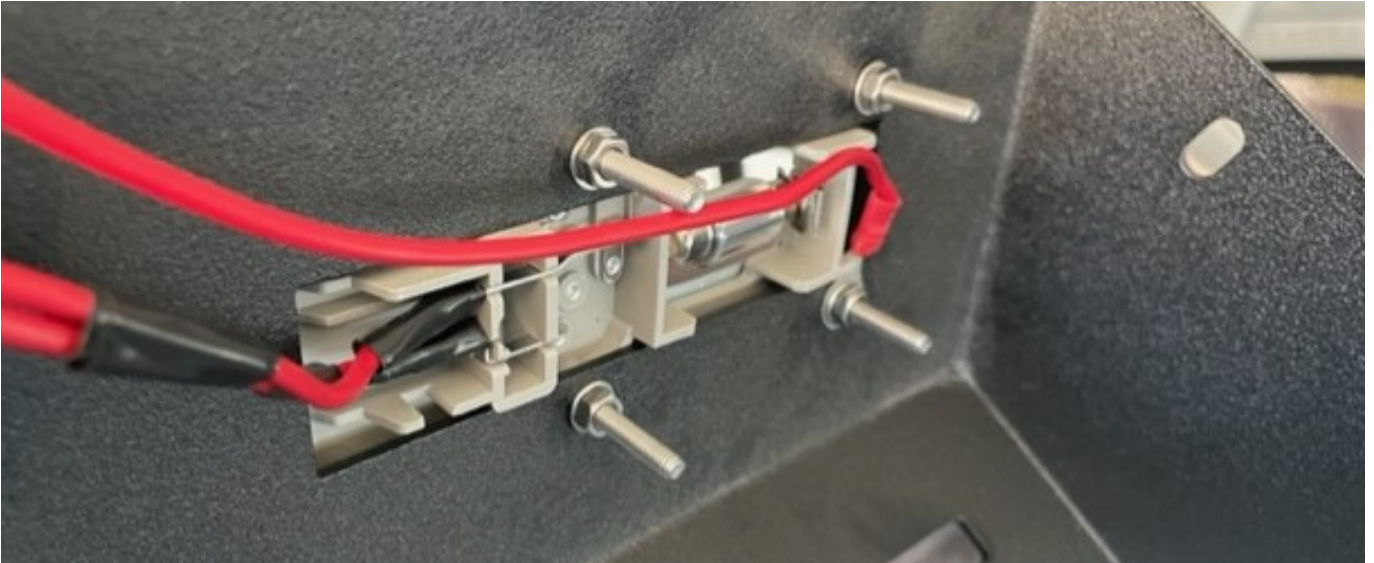

STEP 15

Secure all four bolts ready to fit roof console.

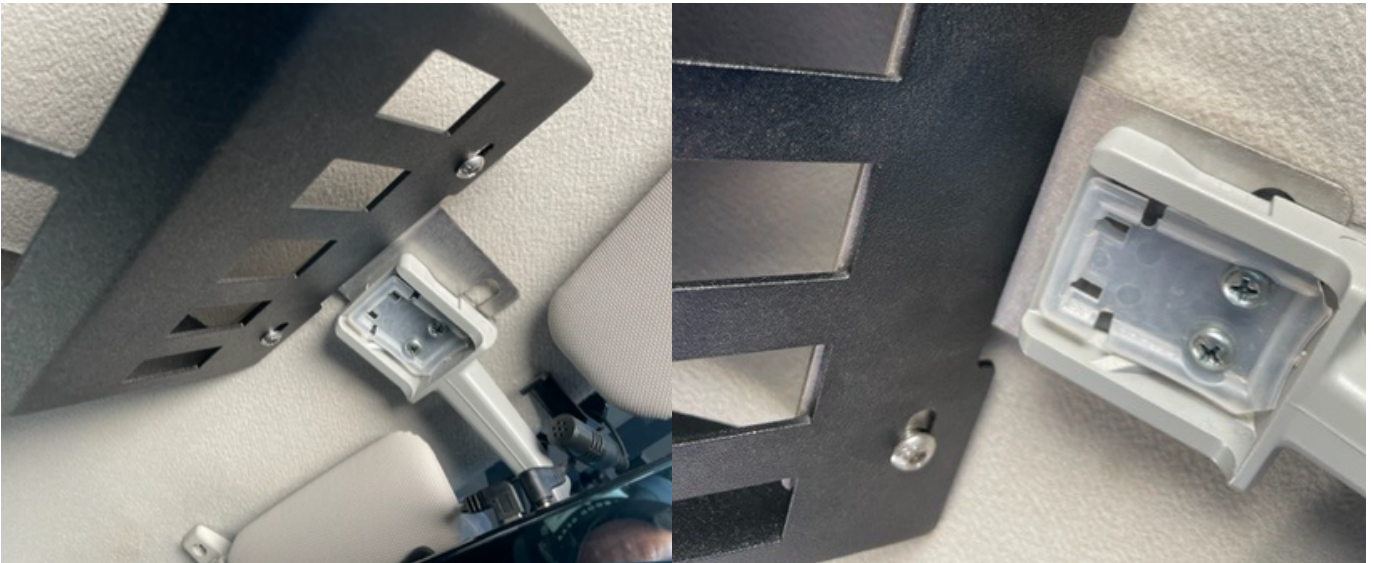

STEP 16

Loosely fit the roof console body to the front bracket.

INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SET76-RC & MR-SET79-2-RC



STEP 15

Secure all four bolts ready to fit roof console.



STEP 16

Refit the interior light cover.



STEP 17

Align the roof console body into the desired position and tighten all bolts.

