




LEGENDEX M.O.L.L.E

PRODUCT CODE: MR-79-R-1

Toyota Landcruiser 79 Single Cab ONLY

PRODUCT CODE: MR-79-R-1

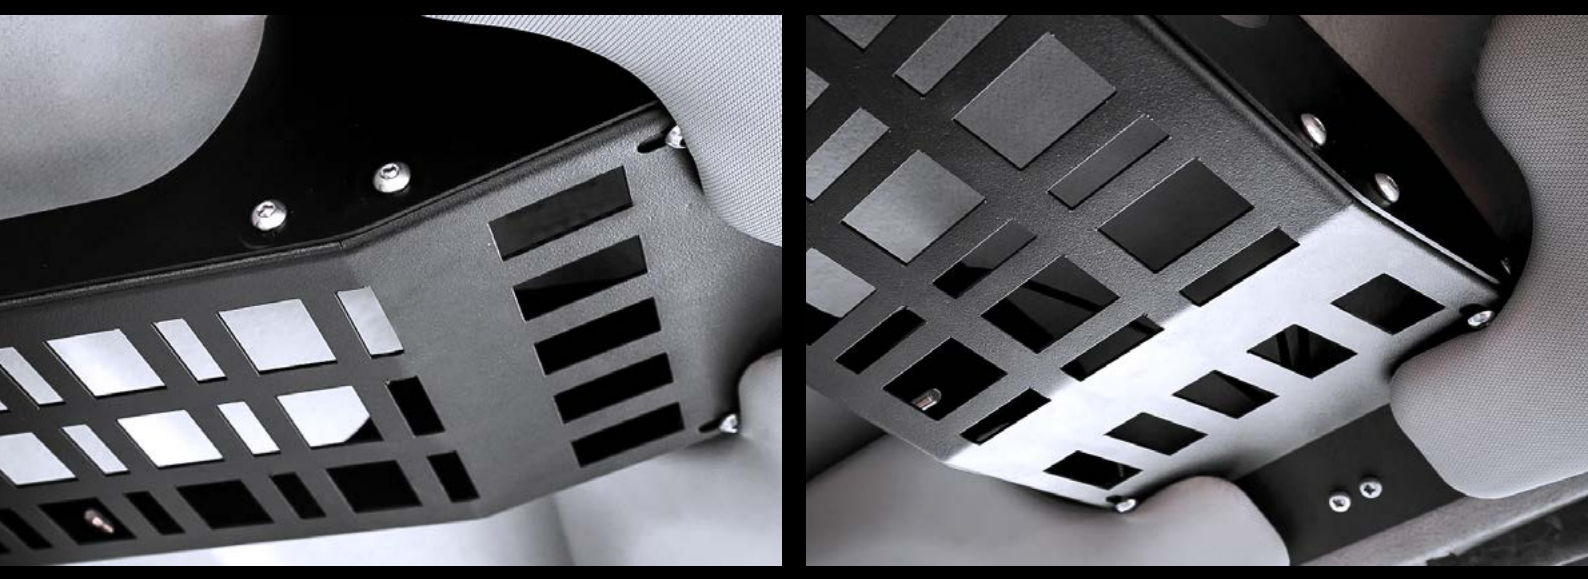

CHECK YOUR PACK LIST

Once you have unpacked the system from the box make sure you have all parts that are listed on the packing list below.

COMPONENTS	GASKET KIT	
MR79-R-1	Roof console cage	1
Side panels	PHS + DHS	2
Front Mirror Bracket		1
Rear light bracket		1
	M6 Flat washers	2
	M5 Bolt+ Nyloc-Nut	6
	M6 Allen Bullet Bolt + Nut	16

TOOLS REQUIRED

- 8mm Spanners- Ratchet spanners work best
- 8mm Ratchet socket.
- Allen Key4
- Screwdriver- Phillips Head
- Screwdriver- Flat, small
- Portable Light

IMPORTANT

- Wear protective clothing including eye wear.
 - Clean Hands work best.
- Before you get started- know what accessories you want to add, doing the wiring first can really save you time later. You can run switches and mount a UHF, or custom lighting.
- Disconnect the Battery to ensure you don't earth out. Or Use an Auto-electrician.

INSTALLING YOUR MOLLE ROOF CONSOLE

- Start with remove your rear vision Mirror, – KEEP THE SCREWS+ all Mirror components. Use the flat head screw drive to pop the cab off, and then the Phillips head screwdriver to remove the Screws.



- Next remove the in-cab light. – KEEP THE SCREWS + all light components. – Disconnect the Battery to ensure you don't earth out. Or Use an Auto-electrician.



- Disconnect the Light from the harness, be careful not to lose harness behind cab.



- Next Up install the Light Bracket—Feed the two connectors into the Larger Centre Hole, one at a time.
 – And use the two original screws you just removed + the flat washers to bolt in. – NOT 100% tight yet.



- Install the Mirror Bracket – Use the two original screws, you just removed, to install the Bracket, behind the mirror—NOT 100% tight yet.
- Now test fit the Molle Roof console- to make sure everything lines up and is correct. Once you are happy- NOW tighten up the two Brackets.



- Next Bolt both side Panels to the Molle Roof console- this will do two things,
a) make it easier to install,
b) Help a line the Molle to the side panels, – start outside holes in.

- Bolt the Roof console to the two brackets- just finger tight for now. -Tip use the sun visor for support-free's up one hand



- Bolt in the Rear first. And the front brackets and last re-connect the Light. With the light make sure you re-use the back- plastic bracket.



- Double check every thing is squared up and tighten the bolts. Now you are ready to mount any accessories you like
- Once both sides are complete – Stand back and enjoy.



FINAL NOTES ONCE MOLLE IS MOUNTED

- Double check all nuts and bolts are tight.
- RE-connect your battery.
- You may now start the vehicle and run at idle for a couple of minutes and listen for any vibration / rattle noises.
- Also, re-check tightness of the bolts after 20-50km

NOTES



THANKS FOR CHOOSING A LEGENDEX PRODUCT!

If you're on Facebook or Instagram we would love to show off your vehicle on our page. Simply tag us in a post with photos of your Legendex product using the tags below and we will feature your vehicle.

@legendex on Facebook and Instagram