



LEGENDEX ROGUE M.O.L.L.E

PRODUCT CODE: MR-SET80-W-PAIR

80 Series Landcruiser Window Molle kit

PRODUCT CODE: MR-SET80-W-PAIR




CHECK YOUR PACK LIST

Once you have unpacked the system from the box make sure you have all parts that are listed on the packing list below.

COMPONENTS

MR-80-W-1-P	PASSENGER SIDE PANEL	1
MR-80-W-1-D	DRIVER SIDE PANEL	1
MR-80-W-B1-P	PASSENGER BRAK CET	1
MR-80-W-B1-D	DRIVER BRAK CET	1
MR-80-W-B2	LOWER BRACKET	4

PASSENGER SIDE PANEL KIT		
S304 Flange Serrated Hex Nut M6		x10
SSBMS304620 - S304 Button Socket Screw 6x20		x4
SSBMS304612 - S304 Button Socket Screw 6x12		x6
M6X12.5X1.2 SS304 Washer		x12
DRIVER SIDE PANEL KIT		
S304 Flange Serrated Hex Nut M6		x10
SSBMS304620 - S304 Button Socket Screw 6x20		x4
SSBMS304612 - S304 Button Socket Screw 6x12		x6
M6X12.5X1.2 SS304 Washer		x12

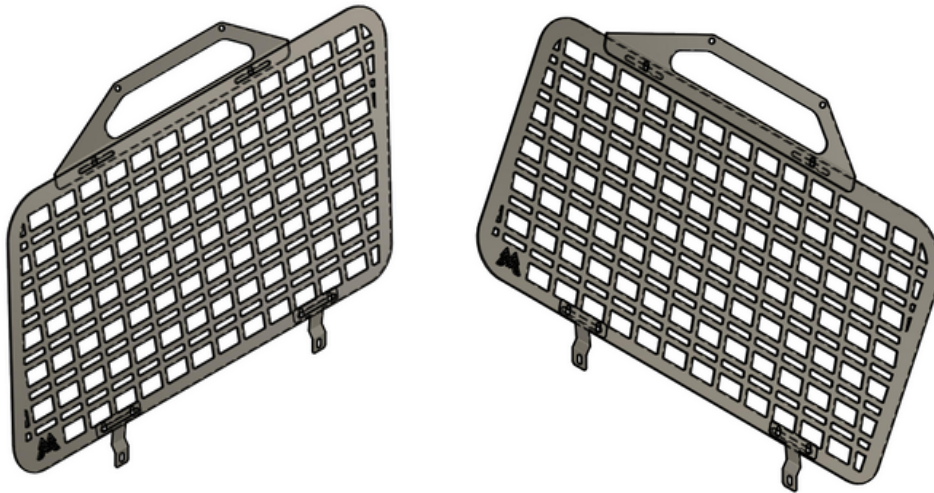

TOOLS REQUIRED

- Screw Driver
- Flat Head Screw Driver
- Shallow pilot drill bit
- Rust preventative Spray
- Marker / Pen
- Drill with 7mm drill bit

IMPORTANT

- Wear protective clothing including eye wear.
- Clean Hands work best.
- Disconnect the Battery to ensure you don't earth out. Or Use an Auto-electrician.

INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SET80-W-PAIR

STEP 1

Start with double-checking all the correct components and gathering the tools required.

STEP 2

Firstly, remove the plastic trim on the passenger side, the arrow is pointing to it in image



STEP 3

Remove passenger grab handle and fit mounting bracket with hardware provided. As it is not recommended to have far rear passenger with the MOLLE panel installed we do not recommend refitting the grab handle.



STEP 4

Loose fit the Rogue MOLLE Panel to the top bracket



INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SET80-W-PAIR

STEP 5

Fit lower T bracket to MOLLE panel and check for factory mounting holes.

Please note, depending on model and years factory holes may line-up or you may need to drill a 7mm hole for mounting.



STEP 6

If factory hole is not available, use the T bracket to mark a location for a 7mm hole



STEP 7

After marking your hole drill and seal with a rust preventative
Use a small shallow pilot drill bit followed by a 7mm drill bit.
Be careful not to drill through too far and hit the outer panel



INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-SET80-W-PAIR

STEP 8

Next, Loose fit top bolt of T-Bracket and tighten the lower bolts firm



STEP 9

Refit Plastic Trim. Some people may wish to trim the plastic around the lower bolt for a tighter fit or you can leave the trim in original condition, and it will twist around the mounting bracket



STEP 10

Now just repeat this same process for the driver side, any questions or issues please call the office on 07 3203 2333



